



General instructions for re-scanning Digital TV Converter boxes

*With converter on, press MENU or SETUP button on remote

*A menu should appear on the screen. Look for a "setup" or "configuration" or "channel" box on the menu, and highlight it

*Look for a "channel scan" or "re-scan" box and highlight it

*Press enter or select

*The box should now be scanning channels. When completed, press menu repeatedly until menu disappears and picture returns.

**These instructions are very generic, and may vary slightly from brand to brand